

May 14/63

Supplement 10/62 to Spare Parts List Type 3

New parts:

311 255 421	Insulation	361 885 343	Retaining cable (improved heating at rear foot level)
311 255 422	Insulation	K 374 10 B	Leatherette silver beige
311 255 429 A	Muffler – Heater	K 376 10 B	Leatherette silver beige (modified width of length)
311 255 430 A	Muffler – Heater	311 941 141	Adjusting screw (correction)
311 255 455	Spring clip	311 971 011 B	Main harness
311 255 509 C	Heater pipe	312 971 011 A	Main harness
311 255 519	Heater vent	361 971 011 B	Main harness
113 255 529 B	Flap	362 971 011 A	Main harness (change in production)
113 255 541	Knob	N 13 890 2	Tapping screw, cheese head (change in production)
113 255 543 B	Trim cover	SP 127 D	1 set of linings (see Workshop Bulletin M-41)
311 255 545	Rubber seal	SP 136	1 set of cups with pistons
113 255 547	Spring clip	SP 137	1 set of cups with pistons (see Workshop Bulletin B-17)
113 255 549	Spring clip (improved heating at rear foot level)	SP 504	1 set of cylinders 83 mm dia.
311 259 199 B	Water drain hose (improvement)	SP 504 A	1 set of cylinders 83 mm dia. (see circular Spare Parts Service)
311 415 213	Identification ring (see Workshop Bulletin)	D 1 a	Sealing compound (requested by customers)
111 415 431	Nut, slotted (improvement)		
341 415 617	Rubber mounting (prevention of short circuits)		
361 501 575	Washer (improvement)		
311 609 237 A	Brake shoe		
311 609 537 C	Brake shoe		
311 611 637	Cup		
361 611 639 A	Cup		
361 611 655 A	Piston		
311 611 657 B	Piston (see Workshop Bulletin B-17)		
311 813 133 A	Seal (improvement)		
311 831 421 B	Pin – Hinge		
311 831 421 C	Pin – Hinge (new parts)		
311 867 941	Clip (change in production)		
361 885 031 A	Seat, rear (228)		
361 885 305 A	Spring core		
		343 255 429 A	Muffler – Heater
		343 255 430 A	Muffler – Heater
		113 255 499	Rubber seal
		343 255 515	Heater vent
		343 259 151 B	Flap – Fresh air control box
		343 259 305 A	Fresh air regulator
		343 259 375 A	Escutcheon
		343 259 379	Button
		343 259 380	Button (foot level heating, rear)
		341 700 021 D	Frame
		311 705 221	Cover plate (new part)
		341 705 481 A	Kick plate

Section 2:

341 800 101	Body, finished	343 845 252 A	Glass – Vent wing (see Workshop Bulletin A 74)
341 800 401	Body bare	341 853 301	Ornamental plate
341 801 117	Reinforcement	341 853 302	Ornamental plate
341 801 118	Reinforcement	341 853 365	Ornamental plate
341 805 051	Instrument panel	341 853 366	Ornamental plate
341 805 111	Frame – Windshield	343 857 231	Cover plate (new parts)
341 805 345	Cover plate – Hinge pillar	343 857 507 A	Rear view mirror (requested by customers)
341 809 087	Quarter panel	341 863 065	Inner mat (431)
341 809 088	Quarter panel	341 863 066	Inner mat (431)
341 809 405	Quarter panel	341 863 381	Inner mat (431)
341 809 406	Quarter panel	343 863 381 A	Inner mat (431) (new parts)
341 809 407	Reinforcement	343 863 381 B	Inner mat (431) (foot level heating, rear)
341 809 408	Reinforcement	341 863 391	Inner mat (431) (new part)
341 809 415	Support – Top hinge	343 863 391 A	Inner mat (431) (foot level heating, rear)
341 809 416	Support – Top hinge	343 863 391 B	Mat (431) (battery ventilation)
341 809 451	Support – Emergency seat	341 863 392	Inner mat (431) (new part)
341 809 452	Support – Emergency seat	343 863 392 A	Inner mat (431) (foot level heating, rear)
341 813 101	Cross reinforcement (new parts)	343 863 392 B	Mat (431) (battery ventilation)
343 813 101 A	Cross reinforcement (foot level heating, rear)	341 863 395	Inner mat (431)
341 813 107	Support – Emergency seat	341 863 405	Inner mat (431)
341 813 109	Support	341 867 035	Trim panel – Quarter panel, 036, 037
341 813 110	Support	341 867 036	Trim panel – Quarter panel, 036, 037
341 813 111	Floorplate – Luggage compartment, rear	341 871 021	Top frame (ready for fitting), 671, 672, 673, 674, 675, 677
341 813 131	Panel, rear, top (new parts)	341 871 025	Top frame
341 813 191	Reinforcement	341 871 035	Cover – Top, 671, 672, 673, 674, 675, 677
341 813 192	Reinforcement	341 871 041	Boot – Top, 348, 349, 350, 351, 352, 353, 354, 355, 356, 379
341 813 911	Bow, rear	341 871 047	Headlining – Top, 520, 521
341 823 525	Knob (new parts)	341 871 057	Rubber hair matting – Top cover
343 831 735 B	Weatherstrip – Door	341 871 425	Molding – Rear bow
343 831 736 B	Weatherstrip – Door	341 871 431	Molding – Rear support
343 837 649 A	Bolt (see Workshop Bulletin A 74)	341 871 433	Sleeve – Molding
341 845 201	Glass – Door (new part)	341 871 491	Retaining channel – Top cover
343 845 201 A	Glass – Door (see Workshop Bulletin A 74)	341 871 503	Top header – Top frame
341 845 202	Glass – Door (new part)		
343 845 202 A	Glass – Door		
343 845 211 A	Weatherstrip		
343 845 212 A	Weatherstrip		
343 845 251 A	Glass – Vent wing		

341 871 513	Winding gear	341 871 926	Rubber seal
341 871 541	Connecting rod	341 871 929	Insert bar
341 871 551	Locking device – Top	341 871 930	Insert bar
341 871 552	Locking device – Top	341 871 945	Head protection
341 871 571	Retaining bracket – Top catch	341 871 947	Lining (new parts)
341 871 595	Washer	343 881 031 B	Seat, 239, 240, 241, 242, 243, 244, 342, 343, 344, 345, 347
341 871 605	Weatherstrip	343 881 032 B	Seat, 239, 240, 241, 242, 243, 244, 342, 343, 344, 345, 347
341 871 607	Weatherstrip	343 881 107 B	Frame
341 871 613	Cover plate, 036, 037	343 881 108 B	Frame
341 871 701	Frame member – Top	343 881 193	Spring
341 871 702	Frame member – Top	343 881 305 B	Spring core
341 871 723	Guide bar, top	343 881 455 B	Trim plate
341 871 724	Guide bar, top	343 881 456 B	Trim plate (see Workshop Bulletin A-62)
341 871 735	Intermediate bow	141 885 561 A	Retaining hook (new part)
341 871 801	Main bow	341 885 031	Emergency seat, 239, 240, 241, 242, 243, 244, 342, 343, 344, 345, 347
341 871 813	Sleeve	341 885 041	Backrest – Emergency seat, 239, 240, 241, 242, 243, 244, 342, 343, 344, 345, 347
341 871 821	Main guide bar	341 885 599	Retainer – Emergency seat backrest
341 871 822	Main guide bar	K 365 13 B	Leatherette, black
341 871 831	Guide bar	K 371 12 B	Leatherette, ice blue
341 871 851	Guide bar	K 375 12 B	Leatherette, ice blue
341 871 852	Guide bar	E 301	Binding, black-grey (new parts)
341 871 857	Bolt, hex. head	N 13 273 1	Bolt
341 871 871	Rear bow	N 14 234 1	Screw, countersunk head
341 871 901	Snap catch	N 16 215 1	Tubular rivet
341 871 913	Insert bar		
341 871 914	Insert bar		
341 871 921	Insert bar		
341 871 922	Insert bar		
341 871 923	Rubber seal		
341 871 924	Rubber seal		
341 871 925	Rubber seal		

No longer available:

311 115 451 B superseded by: 311 115 451 C
 311 259 199 A superseded by: 311 259 199 B
 311 259 200 A superseded by: 311 259 199 B
 311 255 720 no longer available
 311 813 133 superseded by: 311 813 133 A
 311 971 011 superseded by: 311 971 011 B
 312 971 011 superseded by: 312 971 011 A
 361 971 011 superseded by: 361 971 011 B
 362 971 011 superseded by: 362 971 011 A
 N 13 890 1 superseded by: N 13 890 2
 N 11 699 2 superseded by: 361 501 575
 K 374 13 B superseded by: K 374 10 B
 K 376 13 B superseded by: K 376 10 B

Section 2

343 805 591 superseded by: 343 805 591 A
 343 813 301 superseded by: 343 813 301 A
 343 845 211 superseded by: 343 845 211 A
 343 845 212 superseded by: 343 845 212 A
 343 847 341 superseded by: 343 845 211 A/212 A
 343 853 305 superseded by: 343 853 305 A/306 A
 343 853 355 superseded by: 343 853 355 A/356 A
 343 881 031 A superseded by: 343 881 031 B
 343 881 032 A superseded by: 343 881 032 B
 343 881 597 superseded by: 343 881 597 A

Delete:

311 115 451 B superseded by: 311 115 451 C
 111 721 509 A superseded by: 311 721 509
 N 11 699 2 superseded by: 361 501 575
 N 11 394 1 superseded by: N 13 974 1

Section 2

343 857 687 superseded by: 343 857 687 A

At the following part delete in text the Engine No.:

311 115 451 C Oil breather

At the following part delete in text the Chassis No.:**Section 2**

311 721 509 Lever – Accelerator 343 857 687 A Cover strip – Instrument panel